

# Quick Start Guide (TopTouch Display)



<b>1</b> on/off button	<b>2</b> Touch Display	<b>3</b> Colorful Start Button
------------------------	------------------------	--------------------------------

<b>a</b> Current time	<b>b</b> Automatic hood	<b>c</b> selected Rinsing program	<b>d</b> Boiler and Tank temperatures
<b>e</b> Note text	<b>f</b> Service access	<b>g</b> Screen lock	<b>h</b> Operational

Colors of Colorful Start Button				
<b>Green</b>	<b>Yellow</b>	<b>Blue</b>	<b>Red</b>	<b>White</b>
Operational	Machine in preparation or notification	Flashing: Flush active Continuous light: rinse	Error message see display	Menu level

Symbols			
 <b>Rinse</b>	 after Rinse	 <b>Expiration</b>	<b>END</b> End of the wash program
 <b>Hint</b> Press icon for more info	 no salt	 <b>Rinse aid empty</b>	 <b>Cleaner empty</b>
 <b>Maintenance required</b>	<b>A</b> Automatic hood active	 <b>Water filling active</b>	 <b>Error</b> Press icon for more info


## Flushing operation:

- To turn on the machine, long press the power button on/off (1). After switching on, the machine starts the filling process automatically. Operational readiness is indicated by the green start button (3).
- To change the rinse program or activate pumping, press the rinse program icon (c) once.
- You can start the rinsing programme or pumping out by pressing the start button (3).
- If the screen is locked, hold your finger on the left side of the screen and swipe right to unlock it.



## Technician Quick Start Guide:



To enter the main menu, press the button  for the settings.

In this follow-up menu, you have quick access to the following submenus:




- **Language:** Change of language.
- **Detergent:** Settings for washing-up liquid and/or rinse aid
- **Service:** Access to further service information (see next table)
- **set time:** Time and date setting
- **Data:** see Firmware Update Instructions.
  - **Upload Menu:** Update display software.
    - Insert the USB stick before pressing the upload menu button.
  - **Data prog:** Load all ad software.
    - Insert USB flash drive before pressing the "Data Prog" button.
  - **Download Menu:** Download a list of all the cycles performed.
    - Plug in the USB flash drive before pressing the "Download Menu" button. (Not yet active)
- **↩Return button:** Pressing this button will return you to the previous menu.



### Service:


- **Mem Alert:** Fault memory
- **Mem Prog:** List of cycles performed and their result
- **Wrench Symbol:** Technician menu (see next section)
- **Info:** Current setpoints of the selected wash program
- **Factory Reset:** Currently not enabled
- **Return Button:** Return to Previous Menu

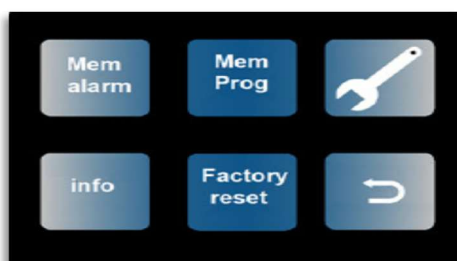




## Wrench Icon: Technician Menu

- **Wifi-Connection:** Currently not active
- **input output state:** Status of dishwasher inputs and outputs
- **Set menu key:** Changing operating parameters (see next section)
- **Return Button:** Return to Previous Menu

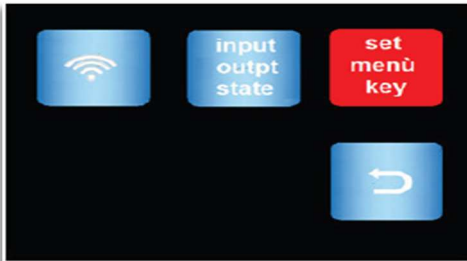


## Set menu key:

- To select the chosen menu, simply press the login button.
  - 12: Installation Menu
  - 35: Service Menu
  - 99: Display Menu

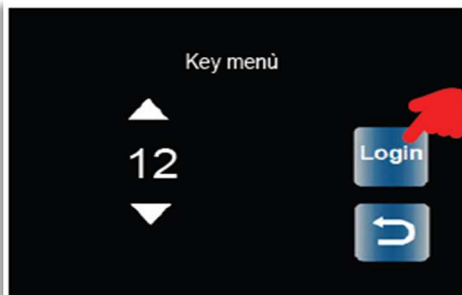

**Note:** The menus and the error codes correspond to the 3.0 series!




## MENU 1:

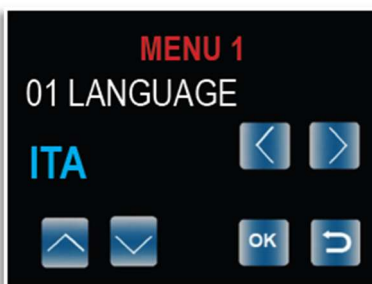

- To save and exit the selected parameter, simply press the **OK** button, or go to the next or previous parameter.

## Clamping 400/230V:

The clamping corresponds to version 3.0. On some machines, instead of menu 45 (turn off parallel heating), there may be a jamper next to the contactors. See the wiring diagram of the machine.

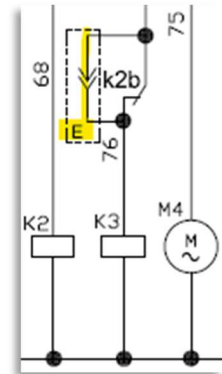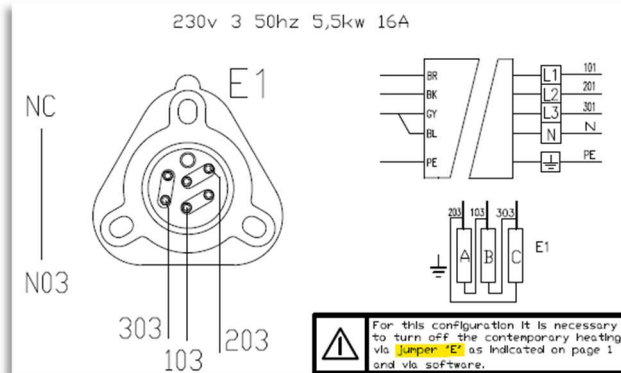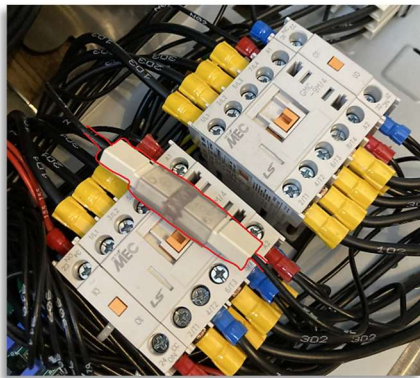

## Modification of the washing programs:



There are several preset programs available:



















 
 










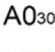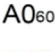




### Voreingestellte Programmgruppen:

- Allgemeine Nutzung → P1, P2, P3, G3
- Gastronomie → P1, P4, G3, S1
- Kantine → P1, G1, B1, Pp2
- Bar/Bistro → P1, C1, C2, G2
- Feinkostgeschäft/Bistro → P2, G1, Pt1
- Feinkostladen → P2, C1, G1, Pt1
- Konditorei → P2, C1, G1, Pt1
- Gesundheitswesen → P1, PA030, PA060
- Schnellimbiss → P1, C1, Pp1, Pp2
- Feste → P1, G2, Pt1, Pp1, Pp2

- To make a change, first tap on the program icon (c). Then hold your finger and hold on the program you want to change. A new screen will appear showing "pre-set" or "Prog".
- **The "Pre-set"** allows a pre-selection that can be changed to the desired "Prog" (see the list "Preset Program Groups").

- With "**Prog**", only a single program is changed.

Just select one from the list:

DISHES							
		P1 STANDARD	P2 INTER- MEDIATE	P3 INTENSIVE	P4 DELICATE	P5 CONTINU- OUS	P6 ECO
GLASSES							
		G1 INTENSIVE	G2 STANDARD	G3 DELICATE	G4 ICE CREAM		
BOTTLES							
		B1 RINSE	B2 WASH	B3 INTENSIVE			
SANITIZE							
		71c P71C	A030 SANI A0= 30	A060 SANI A0= 60	A0 300 SANI A0= 300		
POTS							
		Pt1 STANDARD	Pt2 INTENSIVE	Pt3 LONG			
FLATWARE							
		S1 STANDARD	S2 INTENSIVE				
PLASTIC							
		Pp1 GLASSES	Pp2 DISHES				
CUPS							
		C1 STANDARD	C2 BISTRO	C3 INTENSIVE			

### Own notes:

---



---



---



---



---



---



---



---

If you have any questions, please do not hesitate to contact the COLGED team of technicians:

☎ +49 781 99067122

E-mail: [service@colged.de](mailto:service@colged.de)